

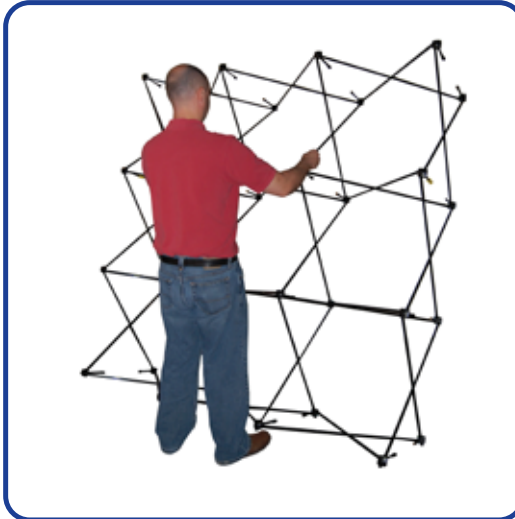


xpressions[®] **SNAPSHOT!**[™] SET-UP INSTRUCTIONS

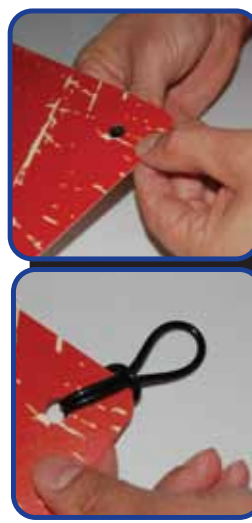

1. Expand Frame
2. Unroll Graphics
3. Hook Black Loops To Hub Nodes As Shown At Left
4. To Replace Black Loops Thread As Shown At Left
5. Reverse Steps Breakdown but **First Unlock Any Yellow AutoLocks As Shown Below!**

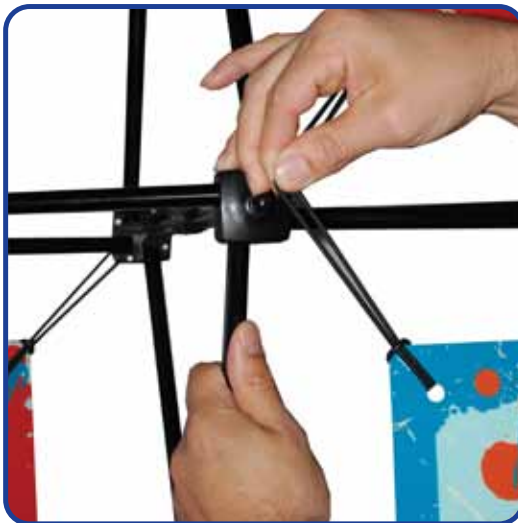

Thread black rubber loop through hole at corner of graphic. Start at back of graphic. Thread front of rubber loop through itself at back and pull gently. Front of loop is now ready to attach onto the xpressions hub node.

Before Break Down

MUST RELEASE AUTO-LOCKS!



Unlock and Offset yellow auto-locks IF ANY TENSION EXISTS STOP! Check auto-locks they may have re-connected, unlock and offset.